

Product Technical File

Something Different Wholesale Ltd, Upper Fforest Way, Enterprise Park, Swansea,
SA6 8PJ

EU RP: Something Different Wholesale Ltd, Utrechtseweg 341, 3818 EL Amersfoort,
Netherlands

Product Code

BF_21828

Bronze Buddha Backflow Incense Burner

Barcode: 5055581694952





Product Description

An intricate and captivating backflow incense burner in a Bronze Buddha and Lotus Leaf design. When the cone is lit the smoke from the cone cascades downwards in a mesmerising waterfall effect to pool at the bottom. Beautiful to watch. For best effects burn indoors in an area away from any sudden air movements. Please note that after burning it is normal for a lightly residue to appear on the oil burner, for this reason we recommend protecting any furniture it is placed upon suitably. The residue can be easily wiped off the burner with a damp cloth. Please exercise caution when burning incense. Only backflow incense cones should be used with this product – standard incense cones will not create the desired effect. It is normal for cones to take up to 10 minutes after being lit to start creating the smoking/mist effect. We supply a selection of backflow incense cones in a variety of scents.

The product is manufactured in China

Product Dimensions:

H: 13.5cm x W: 11cm x D: 14cm

Product Weight:

450g

Product Materials :

Resin & Polyresin

Packaging Materials:

Polystyrene, White Cardboard Box with Sticker,

Packaging Dimensions:

H: 17.5cm x W: 17cm x D: 14.3cm

Packaging Information:

Polystyrene, White Cardboard Box with Sticker,

Packed Weight:

537g

Declaration of Conformity

Something Different Wholesale Ltd, Upper Fforest Way, Enterprise Park, Swansea, SA6 8PJ

Contact Person– Anthony David

Email – customercare@somethingdifferentwholesale.co.uk

Phone Number – 01792 940288



Product Name: Bronze Buddha Backflow Incense Burner

Model: Incense Holders

Product Code: BF_21828

We at SomethingDifferent Wholesale LTD recognise that the product mentioned in this document conforms to UK standards and regulations. This product upholds the UK specifications attached to it.

Authorising Name: Anthony David

Company Name: Something Different Wholesale LTD

Authorising Signature:



Date: 22.11.2024

Review Date:22.10.2025

EU Declaration of Conformity

Name- Something Different Wholesale Ltd

Address- Something Different Wholesale Ltd, Utrechtseweg 341, 3818 EL Amersfoort,
Netherlands

Contact person- Anthony David

Email – EU@somethingdifferentwholesale.co.uk

Phone Number – +441792 940288



Product Name: Bronze Buddha Backflow Incense Burner

Model: Incense Holders

Product Code: BF_21828

We at Something Different Wholesale LTD recognise that the product mentioned in this document conforms to EU standards and regulations. This product upholds the EU specifications attached to it.

Authorising Name: Anthony David

Company Name: Something Different Wholesale LTD

Authorising Signature:



Date: 22.11.2024

Review Date: 22.10.2025

Product Label

Oil & Wax burner warning

Burner without lid

How to use:


- Ensure the burner is placed on a flat, clutter free, and heat-resistant surface.
- Check that the area is open and has good air flow.
- Fill the dish with an appropriate amount of wax, do not overfill the dish. If using a fragrance oil, use 2 to 3 drops of oil diluted with water.
- Place one unscented tealight candle at the bottom of the burner and ensure the wick is standing.
- Light the candle with a long handled lighter.
- Check your burner periodically. Maintain an appropriate level of oil or wax in the dish and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
- Extinguish the candle if you are going to be out of the room. Use a candle snuffer and do not blow out.
- Do not touch the oil, wax or holder until it has completely cooled.

How to clean:

- Allow burner to completely cool before cleaning.
- To remove wax, wait for wax to harden then carefully scoop out.
- Clean residue with warm, soapy water and dry.

Warning

1. Never put more wax or oil into your burner while the candle is still burning.
2. Extinguish the candle first to ensure your safety.
3. Do not overfill your burner. This may cause it to splash and catch on fire.
4. Do not place the burner in a location where it will be easily knocked over.
5. Keep away from flammable objects.
6. Never leave a burning candle unattended.
7. Keep your burner away from children and pets.
8. Keep your burner clean. Dispose of any unused wax or oil after you are finished using your burner.
9. Always read and follow the manufacturer's instructions on candles.
10. Do not allow hot wax or oil to come in contact with skin.



Burner with lid

How to use:


- Ensure the burner is placed on a flat, clutter free, and heat-resistant surface.
- Check that the area is open and has good air flow.
- Remove the lid and fill the dish with an appropriate amount of wax, do not overfill the dish. If using a fragrance oil, use 2 to 3 drops of oil diluted with water.
- Place one unscented tealight candle at the bottom of the burner and ensure the wick is standing.
- Light the candle with a long handled lighter.
- Remove the lid while the candle is burning.
- Check your burner periodically. Maintain an appropriate level of oil or wax in the dish, and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
- Extinguish the candle if you are going to be out of the room. Use a candle snuffer and do not blow out.
- Do not touch the oil, wax or holder until it has completely cooled.

How to clean:

- Allow burner to completely cool before cleaning.
- To remove wax, wait for wax to harden then carefully scoop out.
- Clean residue with warm, soapy water and dry.

Warning:

1. Keep lid off while candle is burning.
2. Never put more wax or oil into your burner while the candle is still burning.
3. Extinguish the candle first to ensure your safety.
4. Do not overfill your burner. This may cause it to splash and catch on fire.
5. Do not place the burner in a location where it will be easily knocked over.
6. Keep away from flammable objects.
7. Never leave a burning candle unattended.
8. Keep your burner away from children and pets.
9. Keep your burner clean. Dispose of any unused wax or oil after you are finished using your burner.
10. Always read and follow the manufacturer's instructions on candles. Do not allow hot wax or oil to come in contact with skin.



Directions for Use

This product is designed for decorative purposes to create pleasing visual aesthetics for the customer as an addition to their desired interior surface. Whilst this product is compliant within GPSR regulations, it is imperative that the product is used appropriately to ensure customer safety. It is the customer's responsibility to source the correct protective measures for their intended surface. We at Something Different Wholesale take no responsibility for injury or product damages due to incorrect installation, usage or storage of decorative items.

This product is for decorative home fragrance product purposes and is not a toy.

This item should be kept out of reach from children and pets as products may contain small parts. This information is readily available on the product packaging.

Home fragrance burners are supplied with guidance and instructions for use for product usage, care and maintenance.

Hazard	Who might be harmed	Existing measure to control risk	Risk level
Allergies	General Public	Testing in accordance with; REACH regulation (EC 1907/2006), Food Contact Materials: Regulation EC 1935/2004, the Directive 84/500/EC, amendment Directive 2005/31/EC	Low
Choking	Children	Not a toy, Keep out of the reach of children	Low
Fire caused by freestanding candles	General Public, property	Product is supplied with fire safety advice.	Medium
Toxicology (Hazard chemicals causing side effects such as skin irritation)	General Public	Product is tested within CLP Regulation (EC) No 1272/2008: Registration of Product and UFI codes applied to labelling	Low
Injury	General Public	Product is supplied with fire safety advice.	Medium

OIL ONLY burner warning

Oil & Wax burner warning

Burner without lid

Burner with lid

Burner without lid

Burner with lid

How to use:

- Ensure the burner is placed on a flat, clutter free, and heat resistant surface.
- Check that the wax is open and has good air flow.
- Fill the dish with an appropriate amount of oil. Do not overfill the dish. Use approximately 2 to 3 drops of oil diluted with water.
- Place one unscented tealight candle at the bottom of the burner and ensure the wick is standing.
- Light the candle with a long handled lighter.
- Check your burner periodically. Maintain an appropriate level of oil in the dish, and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
- Extinguish the candle if you are going to be out of the room. Use a candle snuffer and do not blow out.
- Do not touch the oil or holder until it has completely cooled.

How to clean:

- Allow burner to completely cool before cleaning.
- Clean residue with warm, soapy water and dry.

Warning:

- Never put wax or oil into your burner while the candle is still burning.
- Extinguish the candle first to ensure your safety.
- Do not overfill your burner. This may cause it to splash and catch on fire.
- Do not place the burner in a location where it will be easily knocked over.
- Keep away from flammable objects.
- Never leave a burning candle unattended.
- Keep your burner away from children and pets.
- Keep your burner clean. Dispose of any unused oil after you are finished using your burner.
- Always read and follow the manufacturer's instructions on candles.
- Do not allow hot oil to come in contact with skin.



How to use:

- Ensure the burner is placed on a flat, clutter free, and heat resistant surface.
- Check that the wax is open and has good air flow.
- Remove the lid and fill the dish with an appropriate amount of oil. Do not overfill the dish. Use 2 to 3 drops of oil diluted with water.
- Place one unscented tealight candle at the bottom of the burner and ensure the wick is standing.
- Light the candle with a long handled lighter.
- Remove the lid while the candle is burning.
- Check your burner periodically. Maintain an appropriate level of oil in the dish, and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
- Extinguish the candle if you are going to be out of the room. Use a candle snuffer and do not blow out.
- Do not touch the oil or holder until it has completely cooled.

How to clean:

- Allow burner to completely cool before cleaning.
- Clean residue with warm, soapy water and dry.

Warning:

- Keep lid off while candle is burning.
- Never put more oil into your burner while the candle is still burning.
- Extinguish the candle first to ensure your safety.
- Do not overfill your burner. This may cause it to splash and catch on fire.
- Do not place the burner in a location where it will be easily knocked over.
- Keep away from flammable objects.
- Never leave a burning candle unattended.
- Keep your burner away from children and pets.
- Keep your burner clean. Dispose of any unused oil after you are finished using your burner.
- Always read and follow the manufacturer's instructions on candles.
- Do not allow hot oil to come in contact with skin.



How to use:

- Ensure the burner is placed on a flat, clutter free, and heat resistant surface.
- Check that the wax is open and has good air flow.
- Fill the dish with an appropriate amount of wax. Do not overfill the dish. If using a fragrance oil, use 2 to 3 drops of oil diluted with water.
- Place one unscented tealight candle at the bottom of the burner and ensure the wick is standing.
- Light the candle with a long handled lighter.
- Check your burner periodically. Maintain an appropriate level of oil or wax in the dish and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
- Extinguish the candle if you are going to be out of the room. Use a candle snuffer and do not blow out.
- Do not touch the oil or holder until it has completely cooled.

How to clean:

- Allow burner to completely cool before cleaning.
- To remove wax, wait for wax to harden then carefully scoop out.
- Clean residue with warm, soapy water and dry.

Warning:

- Never put more wax or oil into your burner while the candle is still burning.
- Extinguish the candle first to ensure your safety.
- Do not overfill your burner. This may cause it to splash and catch on fire.
- Do not place the burner in a location where it will be easily knocked over.
- Keep away from flammable objects.
- Never leave a burning candle unattended.
- Keep your burner away from children and pets.
- Keep your burner clean. Dispose of any unused wax or oil after you are finished using your burner.
- Always read and follow the manufacturer's instructions on candles.
- Do not allow hot wax or oil to come in contact with skin.



How to use:

- Ensure the burner is placed on a flat, clutter free, and heat resistant surface.
- Check that the wax is open and has good air flow.
- Remove the lid and fill the dish with an appropriate amount of wax. Do not overfill the dish. If using a fragrance oil, use 2 to 3 drops of oil diluted with water.
- Place one unscented tealight candle at the bottom of the burner and ensure the wick is standing.
- Light the candle with a long handled lighter.
- Remove the lid while the candle is burning.
- Check your burner periodically. Maintain an appropriate level of oil or wax in the dish, and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
- Extinguish the candle if you are going to be out of the room. Use a candle snuffer and do not blow out.
- Do not touch the oil or holder until it has completely cooled.

How to clean:

- Allow burner to completely cool before cleaning.
- To remove wax, wait for wax to harden then carefully scoop out.
- Clean residue with warm, soapy water and dry.

Warning:

- Keep lid off while candle is burning.
- Never put more wax or oil into your burner while the candle is still burning.
- Extinguish the candle first to ensure your safety.
- Do not overfill your burner. This may cause it to splash and catch on fire.
- Do not place the burner in a location where it will be easily knocked over.
- Keep away from flammable objects.
- Never leave a burning candle unattended.
- Keep your burner away from children and pets.
- Keep your burner clean. Dispose of any unused wax or oil after you are finished using your burner.
- Always read and follow the manufacturer's instructions on candles.
- Do not allow hot wax or oil to come in contact with skin.

