

Product Technical File

Something Different Wholesale Ltd, Upper Fforest Way, Enterprise Park, Swansea, SA6 8PJ

EU RP: Something Different Wholesale Ltd, Utrechtseweg 341, 3818 EL Amersfoort, Netherlands

Product Code

OB_72122

White Christmas Tree Oil Burner

Barcode: 5056131131392





Product Description

This sweet oil burner and wax warmer is shaped like a Christmas tree and is easily incorporated into any festive decor. Pairwith winter wax melts or essential oils to fill the home with Christmas fragrance.

Designed by Something Different Wholesale.

The product is manufactured in China

Product Dimensions:

H: 14.7cm x W: 12.3cm x D: 12.3cm

Product Weight:

460g

Product Materials:

Stoneware

Packaging Materials:

Polystyrene, Colour Cardboard Box,

Packaging Dimensions:

H: 15cm x W: 17.5cm x D: 15cm

Packaging Information:

Polystyrene, Colour Cardboard Box,

Packed Weight:

565g



Declaration of Conformity

Something Different Wholesale Ltd, Upper Fforest Way, Enterprise Park, Swansea, SA6 8PJ

Contact Person- Anthony David

Email – customercare@somethingdifferentwholesale.co.uk

Phone Number - 01792 940288



Product Name: White Christmas Tree Oil Burner

Model: Oil Burners and Wax Warmers

Product Code: OB_72122

We at Something Different Wholesale LTD recognise that the product mentioned in this document conforms to UK standards and regulations. This product upholds the UK specifications attached to it.

Authorising Name: Anthony David

Company Name: Something Different Wholesale LTD

Authorising Signature:

Date: 22.11.2024

Review Date:22.10.2025



EU Declaration of Conformity

Name-Something Different Wholesale Ltd

Address - Something Different Wholesale Ltd, Utrechtseweg 341, 3818 EL Amersfoort, Netherlands

Contact person- Anthony David

Email – EU@somethingdifferentwholesale.co.uk

Phone Number - +441792 940288



Product Name: White Christmas Tree Oil Burner

Model: Oil Burners and Wax Warmers

Product Code: OB_72122

We at Something Different Wholesale LTD recognise that the product mentioned in this document conforms to EU standards and regulations. This product upholds the EU specifications attached to it.

Authorising Name: Anthony David

Company Name: Something Different Wholesale LTD

Authorising Signature:

Date: 22.11.2024

Review Date: 22.10.2025



Product Label

Oil & Wax burner warning

Burner without lid

- How to use:

 Ensure the burner is placed on a flat, clutter free, and heat-resistant surface.

 Check that the area is open and has good air flow.

 Fill the dish with an appropriate amount of wax, do not overfill the dish. If using a fragrance oil, use 2 to 3 drops of oil diluted with water.

 Place one unscented tealight candle at the bottom of the burner and ensure the
- wick is standing. Light the candle with a long handled lighter.
- Light the candle with a long handled lighter.
 Check your burner periodically, Maintain an appropriate level of oil or wax in the dish and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
 Extinguish the candle if you are going to be out of the room. Use a candle snuffer and do not blow out.
 Do not touch the oil, wax or holder until it has completely cooled.

- Allow burner to completely cool before cleaning.
 To remove wax, wait for wax to harden then carefully scoop out.
 Clean residue with warm, soapy water and dry.

- Warning

 1. Never put more wax or oil into your burner while the candle is still burning.

 2. Extinguish the candle first to ensure your safety.

 3. Do not overfill your burner. This may cause it to splash and catch on fire.

 4. Do not place the burner in a location where it will be easily knocked over.

 5. Keep away from flammable objects.

 6. Never leave a burner away from children and pets.

- Onever newer a burning carolie unauterioed.

 7. Keep your burner away from children and pets.

 8. Keep your burner clean. Dispose of any unused wax or oil after you are finished using your burner.

 9. Always read and follow the manufacturer's instructions on candles.

 10. Do not allow hot wax or oil to come in contact with skin.







Burner with lid

- How to use:

 Ensure the burner is placed on a flat, clutter free, and heat-resistant surface.
 Check that the area is open and has good air flow.
 Remove the lid and fill the dish with an appropriate amount of wax, do not overfill the dish. If using a fragrance oil, use 2 to 3 drops of oil diluted with water.
 Place one unscented tealight candle at the bottom of the burner and ensure the wick is standing.
 Light the candle with a long handled lighter.
 Remove the lid while the candle is burning.
 Check your burner periodically. Maintain an appropriate level of oil or wax in the dish, and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
 Extinguish the candle if you are going to be out of the room. Use a candle surufer and do not blow out.
 Do not touch the oil, wax or holder until it has completely cooled.

- Warning:

 1. Keep lid off while candle is burning.

 2. Never put more wax or oil into your burner while the candle is still burning.

 3. Extinguish the candle first to ensure your safety.

 4. Do not overfill your burner. This may cause it to splash and catch on fire.

 5. Do not place the burner in a location where it will be easily knocked over.

 6. Keep away from flammable objects.

 7. Never leave a burning candle unattended.

- 8.Keep your burner away from children and pets. 9.Keep your burner clean. Dispose of any unused wax or oil after you are
- Finished using your burner.

 10. Always read and follow the manufacturer's instructions on candles. Do not allow hot wax or oil to come in contact with skin.







Directions for Use

This product is designed for decorative purposes to create pleasing visual aesthetics for the customer as an addition to their desired interior surface. Whilst this product is compliant within GPSR regulations, it is imperative that the product is used appropriately to ensure customer safety. It is the customer's responsibility to source the correct protective measures for their intended surface. We at Something Different Wholesale take no responsibility for injury or product damages due to incorrect installation, usage or storage of decorative items.

This product is for decorative home fragrance product purposes and is not a toy. This item should be kept out of reach from children and pets as products may contain small parts. This information is readily available on the product packaging.



Home fragrance burners are supplied with guidance and instructions for use for product usage, care and maintenance.

Hazard	Who might be harmed	Existing measure to control risk	Risk level
Allergies	General Public	Testing in accordance with; REACH regulation (EC 1907/2006), Food Contact Materials: Regulation EC 1935/2004, the Directive 84/500/EC, amendment Directive 2005/31/EC	Low
Choking	Children	Not a toy, Keep out of the reach of children	Low
Fire caused by freestanding candles	General Public, property	Product is supplied with fire safety advice.	Medium
Toxicology (Hazard chemicals causing side effects such as skin irritation)	General Public	Product is tested within CLP Regulation (EC) No 1272/2008: Registration of Product and UFI codes applied to labelling	Low
Injury	General Public	Product is supplied with fire safety advice.	Medium

OIL ONLY burner warning

Oil & Wax burner warning

Burner without lid

How to last: - Ensure the burner is placed on a flirt, distret free, and hear resistant surface. - Chack that the was is open and had good for flow. - If all the falls with an appearant answer of oil, during consell for each, use. - If all the falls with an appearant answer of oil, during consell for each, use. - If all the falls with an appearant answer for oil, during the consellence of the dish, and wastif the burner for another. If your burner largest is more, extensionable, the consellence of the consellence of

Burner with lid

Burner without lid

placed on a flat, clutter free, and heat-resistant surface.
s open and has good air flow.
appropriate amount of wax, do not overfill the dish: If using a
J drops of dis gilluted with water.
healight candle at the bottom of the burner and irrever the
a long handled lighter.
eriodically. Maintain an appropriate level of oil or wax in the
imer for smoke, if your burner begins to smoke, extinguish
burner and start over with a new testight.
a if you are going to be out of the room. Use a candle
en risi).
was or holder until it has completely cooled.
pletely cool before clearing.
for way to harden then carefully acrop out.
arm, soapy water and dry
or pil into your burner while the candle is still burning.
le first te-move your safety.
burner. This may cause it to solarm and catch on fire.
mer in a location where it will be easily knocked over
nmable offeeds.
ng candle unattended.
say from children and pets
ean. Dispose of any unused was or oil after you are:
arner.
ow the manufacturer's instructions on cardies.
rax or oil to come in contact with skin.
The state of the s

Burner with lid

