

Product Technical File

Something Different Wholesale Ltd, Upper Fforest Way, Enterprise Park, Swansea, SA6 8PJ

EU RP: Something Different Wholesale Ltd, Utrechtseweg 341, 3818 EL Amersfoort, Netherlands

Product Code

SF_72124

Pink Gingerbread House Oil Burner

Barcode: 5056131152564





Product Description

Who can resist this sweet, candy pink gingerbread house oil burner with snow frosting details. Remove the lid to add festivescents, place a lit tealight inside and watch this little home come to life with a warm, inviting glow. When not in use thisoil burner becomes an ornamental detail that's sure to become a beloved piece in any Christmas decoration collection. Recommended for use with fragrance oil diluted with water. Always remove the lid whilst in use. Designed by Something Different Wholesale and part of the Sugarplum fun range of contemporary Christmas decorations and accessories.

The product is manufactured in China

Product Dimensions:

H: 13.5cm x W: 10.5cm x D: 9.2cm

Product Weight:

520g

Product Materials:

Ceramic and Stoneware

Packaging Materials:

Polystyrene, Colour Cardboard Box

Packaging Dimensions:

H: 12.5cm x W: 16cm x D: 12.5cm

Packaging Information:

Polystyrene, Colour Cardboard Box

Packed Weight:

590g



Declaration of Conformity

Something Different Wholesale Ltd, Upper Fforest Way, Enterprise Park, Swansea, SA6 8PJ

Contact Person - Anthony David

Email – customercare@somethingdifferentwholesale.co.uk

Phone Number - 01792 940288



Product Name: Pink Gingerbread House Oil Burner

Model: Oil Burners and Wax Warmers

Product Code: SF_72124

We at Something Different Wholesale LTD recognise that the product mentioned in this document conforms to UK standards and regulations. This product upholds the UK specifications attached to it.

Authorising Name: Anthony David

Company Name: Something Different Wholesale LTD

Authorising Signature:

Date: 22.11.2024

Review Date:22.10.2025



EU Declaration of Conformity


Name-Something Different Wholesale Ltd

Address - Something Different Wholesale Ltd, Utrechtseweg 341, 3818 EL Amersfoort, Netherlands

Contact person- Anthony David

Email – EU@somethingdifferentwholesale.co.uk

Phone Number - +441792 940288

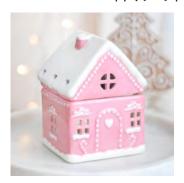

Product Name: Pink Gingerbread House Oil Burner

Model: Oil Burners and Wax Warmers

Product Code: SF_72124

We at Something Different Wholesale LTD recognise that the product mentioned in this document conforms to EU standards and regulations. This product upholds the EU specifications attached to it.

Authorising Name: Anthony David

Company Name: Something Different Wholesale LTD

Authorising Signature:

Date: 22.11.2024

Review Date: 22.10.2025



Product Label

Oil & Wax burner warning

Burner without lid

- How to use:

 Ensure the burner is placed on a flat, clutter free, and heat-resistant surface.

 Check that the area is open and has good air flow.

 Fill the dish with an appropriate amount of wax, do not overfill the dish. If using a fragrance oil, use 2 to 3 drops of oil diluted with water.

 Place one unscented tealight candle at the bottom of the burner and ensure the
- wick is standing. Light the candle with a long handled lighter.
- Light the candle with a long handled lighter.
 Check your burner periodically, Maintain an appropriate level of oil or wax in the dish and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
 Extinguish the candle if you are going to be out of the room. Use a candle snuffer and do not blow out.
 Do not touch the oil, wax or holder until it has completely cooled.

- Allow burner to completely cool before cleaning.
 To remove wax, wait for wax to harden then carefully scoop out.
 Clean residue with warm, soapy water and dry.

- Warning

 1. Never put more wax or oil into your burner while the candle is still burning.

 2. Extinguish the candle first to ensure your safety.

 3. Do not overfill your burner. This may cause it to splash and catch on fire.

 4. Do not place the burner in a location where it will be easily knocked over.

 5. Keep away from flammable objects.

 6. Never leave a burner away from children and pets.

- Onever newer a burning carolie unauterioed.

 7. Keep your burner away from children and pets.

 8. Keep your burner clean. Dispose of any unused wax or oil after you are finished using your burner.

 9. Always read and follow the manufacturer's instructions on candles.

 10. Do not allow hot wax or oil to come in contact with skin.







Burner with lid

- How to use:

 Ensure the burner is placed on a flat, clutter free, and heat-resistant surface.
 Check that the area is open and has good air flow.
 Remove the lid and fill the dish with an appropriate amount of wax, do not overfill the dish. If using a fragrance oil, use 2 to 3 drops of oil diluted with water.
 Place one unscented tealight candle at the bottom of the burner and ensure the wick is standing.
 Light the candle with a long handled lighter.
 Remove the lid while the candle is burning.
 Check your burner periodically. Maintain an appropriate level of oil or wax in the dish, and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
 Extinguish the candle if you are going to be out of the room. Use a candle surufer and do not blow out.
 Do not touch the oil, wax or holder until it has completely cooled.

- Warning:

 1. Keep lid off while candle is burning.

 2. Never put more wax or oil into your burner while the candle is still burning.

 3. Extinguish the candle first to ensure your safety.

 4. Do not overfill your burner. This may cause it to splash and catch on fire.

 5. Do not place the burner in a location where it will be easily knocked over.

 6. Keep away from flammable objects.

 7. Never leave a burning candle unattended.

- 8.Keep your burner away from children and pets. 9.Keep your burner clean. Dispose of any unused wax or oil after you are
- Finished using your burner.

 10. Always read and follow the manufacturer's instructions on candles. Do not allow hot wax or oil to come in contact with skin.







Directions for Use

This product is designed for decorative purposes to create pleasing visual aesthetics for the customer as an addition to their desired interior surface. Whilst this product is compliant within GPSR regulations, it is imperative that the product is used appropriately to ensure customer safety. It is the customer's responsibility to source the correct protective measures for their intended surface. We at Something Different Wholesale take no responsibility for injury or product damages due to incorrect installation, usage or storage of decorative items.

This product is for decorative home fragrance product purposes and is not a toy. This item should be kept out of reach from children and pets as products may contain small parts. This information is readily available on the product packaging.



Home fragrance burners are supplied with guidance and instructions for use for product usage, care and maintenance.

Hazard	Who might be harmed	Existing measure to control risk	Risk level
Allergies	General Public	Testing in accordance with; REACH regulation (EC 1907/2006), Food Contact Materials: Regulation EC 1935/2004, the Directive 84/500/EC, amendment Directive 2005/31/EC	Low
Choking	Children	Not a toy, Keep out of the reach of children	Low
Fire caused by freestanding candles	General Public, property	Product is supplied with fire safety advice.	Medium
Toxicology (Hazard chemicals causing side effects such as skin irritation)	General Public	Product is tested within CLP Regulation (EC) No 1272/2008: Registration of Product and UFI codes applied to labelling	Low
Injury	General Public	Product is supplied with fire safety advice.	Medium

OIL ONLY burner warning

Oil & Wax burner warning

Burner without lid

How to last: - Ensure the burner is placed on a flirt, distret free, and hear resistant surface. - Charlot than the was is open and had good on flow. - If all the falls with an appearant answer of oil, during consell the eduh, use. - If all the falls with an appearant answer of oil, during consell the eduh, use. - If all the falls with a supplication answer oil oil during conselled the eduh, use. - If all the falls with a supplication answer to the eduh, use. - Please connectioned in calliform and a state over the better oil the beamer and ensure the said and and the beamer for any such a produced lighter. - Chock coe burner for any such as your burner largest is sonate, exceptionally, Mantania and any such as the condition and connectication and connecti

Burner with lid

Burner without lid

iced on a flat, clutter free, and heat-resistant surface.
pen and has good air flow.
propriets amount of wax, do not overfill the dish: if using
Strops of ciri (Slipted with easier.
slight candle at the bottom of the burner and instead the
long handled lighter.
odically. Maintain an appropriate level of oil or wax in the
er for smoke. If your burner begins to smoke, extinguish
urner and start over with a new testight.
you are going to be out of the room. Use a candle
cut.
as of holder until if has completely cooled.
stely cool before dearing.
was to harden then carefully acrop out.
m, soapy water and dry
roll into your burner while the candle is still burning.
first te-encure your safety.
rner. This may cause it to solarin and calch on file.
or in a location where it will be easily knocked over
subterativects.
candle unattended.
from children and pets
Dispose of any unused was an oil after you are:
er.
the manufacturer's instructions on cardies.
ev oil to come in contact with skin.

Burner with lid

