

Product Technical File

Something Different Wholesale Ltd, Upper Fforest Way, Enterprise Park, Swansea,
SA6 8PJ

EU RP: Something Different Wholesale Ltd, Utrechtseweg 341, 3818 EL Amersfoort,
Netherlands

Product Code

TC_86124

Black Triple Moon Tarot Card Stand Tealight Holder

Barcode: 5056131153998





Product Description

Display tarot card readings with this black wooden triple moon tarot card stand, complete with two spaces for holding tealight candles to create ambiance and allow the meaning of the cards to resonate. Whether it's used for displaying treasured tarot cards for their meaning or their unique design, this piece will add mystical allure to any home. Designed by Something Different and part of our Modern Altar collection of spiritual home decor accessories.

The product is manufactured in China

Product Dimensions:

H: 2cm x W: 30cm x D: 10cm

Product Weight:

360g

Product Materials :

MDF

Packaging Materials:

Bubble Bag

Packaging Dimensions:

H: 31cm x W: 2.7cm x D: 11cm

Packaging Information:

Bubble Bag

Packed Weight:

405g

Declaration of Conformity

Something Different Wholesale Ltd, Upper Fforest Way, Enterprise Park, Swansea, SA6 8PJ

Contact Person– Anthony David

Email – customercare@somethingdifferentwholesale.co.uk

Phone Number – 01792 940288



Product Name: Black Triple Moon Tarot Card Stand Tealight Holder

Model: Candle Holders

Product Code: TC_86124

We at SomethingDifferent Wholesale LTD recognise that the product mentioned in this document conforms to UK standards and regulations. This product upholds the UK specifications attached to it.

Authorising Name: Anthony David

Company Name: Something Different Wholesale LTD

Authorising Signature:



Date: 22.11.2024

Review Date:22.10.2025

EU Declaration of Conformity

Name- Something Different Wholesale Ltd

Address- Something Different Wholesale Ltd, Utrechtseweg 341, 3818 EL Amersfoort,
Netherlands

Contact person- Anthony David

Email – EU@somethingdifferentwholesale.co.uk

Phone Number – +441792 940288



Product Name: Black Triple Moon Tarot Card Stand Tealight Holder

Model: Candle Holders

Product Code: TC_86124

We at Something Different Wholesale LTD recognise that the product mentioned in this document conforms to EU standards and regulations. This product upholds the EU specifications attached to it.

Authorising Name: Anthony David

Company Name: Something Different Wholesale LTD

Authorising Signature:



Date: 22.11.2024

Review Date: 22.10.2025

Product Label

Oil & Wax burner warning

Burner without lid

How to use:


- Ensure the burner is placed on a flat, clutter free, and heat-resistant surface.
- Check that the area is open and has good air flow.
- Fill the dish with an appropriate amount of wax, do not overfill the dish. If using a fragrance oil, use 2 to 3 drops of oil diluted with water.
- Place one unscented tealight candle at the bottom of the burner and ensure the wick is standing.
- Light the candle with a long handled lighter.
- Check your burner periodically. Maintain an appropriate level of oil or wax in the dish and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
- Extinguish the candle if you are going to be out of the room. Use a candle snuffer and do not blow out.
- Do not touch the oil, wax or holder until it has completely cooled.

How to clean:

- Allow burner to completely cool before cleaning.
- To remove wax, wait for wax to harden then carefully scoop out.
- Clean residue with warm, soapy water and dry.

Warning

1. Never put more wax or oil into your burner while the candle is still burning.
2. Extinguish the candle first to ensure your safety.
3. Do not overfill your burner. This may cause it to splash and catch on fire.
4. Do not place the burner in a location where it will be easily knocked over.
5. Keep away from flammable objects.
6. Never leave a burning candle unattended.
7. Keep your burner away from children and pets.
8. Keep your burner clean. Dispose of any unused wax or oil after you are finished using your burner.
9. Always read and follow the manufacturer's instructions on candles.
10. Do not allow hot wax or oil to come in contact with skin.



Burner with lid

How to use:


- Ensure the burner is placed on a flat, clutter free, and heat-resistant surface.
- Check that the area is open and has good air flow.
- Remove the lid and fill the dish with an appropriate amount of wax, do not overfill the dish. If using a fragrance oil, use 2 to 3 drops of oil diluted with water.
- Place one unscented tealight candle at the bottom of the burner and ensure the wick is standing.
- Light the candle with a long handled lighter.
- Remove the lid while the candle is burning.
- Check your burner periodically. Maintain an appropriate level of oil or wax in the dish, and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
- Extinguish the candle if you are going to be out of the room. Use a candle snuffer and do not blow out.
- Do not touch the oil, wax or holder until it has completely cooled.

How to clean:

- Allow burner to completely cool before cleaning.
- To remove wax, wait for wax to harden then carefully scoop out.
- Clean residue with warm, soapy water and dry.

Warning:

1. Keep lid off while candle is burning.
2. Never put more wax or oil into your burner while the candle is still burning.
3. Extinguish the candle first to ensure your safety.
4. Do not overfill your burner. This may cause it to splash and catch on fire.
5. Do not place the burner in a location where it will be easily knocked over.
6. Keep away from flammable objects.
7. Never leave a burning candle unattended.
8. Keep your burner away from children and pets.
9. Keep your burner clean. Dispose of any unused wax or oil after you are finished using your burner.
10. Always read and follow the manufacturer's instructions on candles. Do not allow hot wax or oil to come in contact with skin.



Directions for Use

This product is designed for decorative purposes to create pleasing visual aesthetics for the customer as an addition to their desired interior surface. Whilst this product is compliant within GPSR regulations, it is imperative that the product is used appropriately to ensure customer safety. It is the customer's responsibility to source the correct protective measures for their intended surface. We at Something Different Wholesale take no responsibility for injury or product damages due to incorrect installation, usage or storage of decorative items.

This product is for decorative home fragrance product purposes and is not a toy.

This item should be kept out of reach from children and pets as products may contain small parts. This information is readily available on the product packaging.

Home fragrance burners are supplied with guidance and instructions for use for product usage, care and maintenance.

Hazard	Who might be harmed	Existing measure to control risk	Risk level
Allergies	General Public	Testing in accordance with; REACH regulation (EC 1907/2006), Food Contact Materials: Regulation EC 1935/2004, the Directive 84/500/EC, amendment Directive 2005/31/EC	Low
Choking	Children	Not a toy, Keep out of the reach of children	Low
Fire caused by freestanding candles	General Public, property	Product is supplied with fire safety advice.	Medium
Toxicology (Hazard chemicals causing side effects such as skin irritation)	General Public	Product is tested within CLP Regulation (EC) No 1272/2008: Registration of Product and UFI codes applied to labelling	Low
Injury	General Public	Product is supplied with fire safety advice.	Medium

OIL ONLY burner warning

Oil & Wax burner warning

Burner without lid

Burner with lid

Burner without lid

Burner with lid

How to use:


- Ensure the burner is placed on a flat, clutter free, and heat resistant surface.
- Check that the wax is open and has good air flow.
- Fill the dish with an appropriate amount of oil. Do not overfill the dish. Use approximately 2 to 3 drops of oil diluted with water.
- Place one unscented tealight candle at the bottom of the burner and ensure the wick is standing.
- Light the candle with a long handled lighter.
- Check your burner periodically. Maintain an appropriate level of oil in the dish, and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
- Extinguish the candle if you are going to be out of the room. Use a candle snuffer and do not blow out.
- Do not touch the oil or holder until it has completely cooled.

How to clean:

- Allow burner to completely cool before cleaning.
- Clean residue with warm, soapy water and dry.

Warning:

- Never put wax or oil into your burner while the candle is still burning.
- Extinguish the candle first to ensure your safety.
- Do not overfill your burner. This may cause it to splash and catch on fire.
- Do not place the burner in a location where it will be easily knocked over.
- Keep away from flammable objects.
- Never leave a burning candle unattended.
- Keep your burner away from children and pets.
- Keep your burner clean. Dispose of any unused oil after you are finished using your burner.
- Always read and follow the manufacturer's instructions on candles.
- Do not allow hot oil to come in contact with skin.



How to use:

- Ensure the burner is placed on a flat, clutter free, and heat resistant surface.
- Check that the wax is open and has good air flow.
- Remove the lid and fill the dish with an appropriate amount of oil. Do not overfill the dish. Use 2 to 3 drops of oil diluted with water.
- Place one unscented tealight candle at the bottom of the burner and ensure the wick is standing.
- Light the candle with a long handled lighter.
- Remove the lid while the candle is burning.
- Check your burner periodically. Maintain an appropriate level of oil in the dish, and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
- Extinguish the candle if you are going to be out of the room. Use a candle snuffer and do not blow out.
- Do not touch the oil or holder until it has completely cooled.

How to clean:

- Allow burner to completely cool before cleaning.
- Clean residue with warm, soapy water and dry.

Warning:

- Never lift off while candle is burning.
- Never put more oil into your burner while the candle is still burning.
- Extinguish the candle first to ensure your safety.
- Do not overfill your burner. This may cause it to splash and catch on fire.
- Do not place the burner in a location where it will be easily knocked over.
- Keep away from flammable objects.
- Never leave a burning candle unattended.
- Keep your burner away from children and pets.
- Keep your burner clean. Dispose of any unused oil after you are finished using your burner.
- Always read and follow the manufacturer's instructions on candles.
- Do not allow hot oil to come in contact with skin.



How to use:

- Ensure the burner is placed on a flat, clutter free, and heat resistant surface.
- Check that the wax is open and has good air flow.
- Fill the dish with an appropriate amount of wax. Do not overfill the dish. If using a fragrance oil, use 2 to 3 drops of oil diluted with water.
- Place one unscented tealight candle at the bottom of the burner and ensure the wick is standing.
- Light the candle with a long handled lighter.
- Check your burner periodically. Maintain an appropriate level of oil or wax in the dish and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
- Extinguish the candle if you are going to be out of the room. Use a candle snuffer and do not blow out.
- Do not touch the oil or holder until it has completely cooled.

How to clean:

- Allow burner to completely cool before cleaning.
- To remove wax, wait for wax to harden then carefully scoop out.
- Clean residue with warm, soapy water and dry.

Warning:

- Never put more wax or oil into your burner while the candle is still burning.
- Extinguish the candle first to ensure your safety.
- Do not overfill your burner. This may cause it to splash and catch on fire.
- Do not place the burner in a location where it will be easily knocked over.
- Keep away from flammable objects.
- Never leave a burning candle unattended.
- Keep your burner away from children and pets.
- Keep your burner clean. Dispose of any unused wax or oil after you are finished using your burner.
- Always read and follow the manufacturer's instructions on candles.
- Do not allow hot wax or oil to come in contact with skin.



How to use:

- Ensure the burner is placed on a flat, clutter free, and heat resistant surface.
- Check that the wax is open and has good air flow.
- Remove the lid and fill the dish with an appropriate amount of wax. Do not overfill the dish. If using a fragrance oil, use 2 to 3 drops of oil diluted with water.
- Place one unscented tealight candle at the bottom of the burner and ensure the wick is standing.
- Light the candle with a long handled lighter.
- Remove the lid while the candle is burning.
- Check your burner periodically. Maintain an appropriate level of oil or wax in the dish, and watch the burner for smoke. If your burner begins to smoke, extinguish the candle, clean your burner and start over with a new tealight.
- Extinguish the candle if you are going to be out of the room. Use a candle snuffer and do not blow out.
- Do not touch the oil or holder until it has completely cooled.

How to clean:

- Allow burner to completely cool before cleaning.
- To remove wax, wait for wax to harden then carefully scoop out.
- Clean residue with warm, soapy water and dry.

Warning:

- Never lift off while candle is burning.
- Never put more wax or oil into your burner while the candle is still burning.
- Extinguish the candle first to ensure your safety.
- Do not overfill your burner. This may cause it to splash and catch on fire.
- Do not place the burner in a location where it will be easily knocked over.
- Keep away from flammable objects.
- Never leave a burning candle unattended.
- Keep your burner away from children and pets.
- Keep your burner clean. Dispose of any unused wax or oil after you are finished using your burner.
- Always read and follow the manufacturer's instructions on candles. Do not allow hot wax or oil to come in contact with skin.

